

GETTING STARTED WITH YOUR

Klangei® *next*

Before diving into your sound experience, please read the operating instructions and safety instructions carefully.

1. CHARGE YOUR KLANGEI NEXT

You will find the Klangei next and the charging cable in the Ei-bag (*transport bag*). Connect the micro USB plug of the charging cable to your Klangei *next*. Then connect the USB plug to your computer or do this with a USB mains adapter (*socket adapter, available as an accessory*) to a mains socket. A small LED light on the Klangei next (to the left of the micro USB connector) will light up red. As soon as the LED lights up green, the Klangei next is fully charged. This can take up to 3 hours.

2. MAKE THE REMOTE CONTROL READY FOR USE


Meanwhile, you can insert two AAA batteries into the remote control. (*These are not included in the delivery*).

3. REMOVE PROTECTIVE FOILS

There are protective foils on the touch display and the foot of the Klangei *next*.

4. LISTEN AND FEEL MUSIC

The music is stored on a microSD card. This is safely stored in the SD card adapter on the inside right of your music album. Pull the microSD card out of the bottom of the adapter and insert it into the microSD slot of the Klangei *next*. (The golden contacts point upwards.)

You can also use the SD adapter to transfer the music to your computer. Touch the „POWER“  button on the top of your Klangei *next*. The music from the microSD card is played. The title display appears on the screen.


5. HI ... I AM NEXT

When the display lights up green, your Klangei *next* is ready for music enjoyment!


The **SOUND EXPERIENCE** depends very much on the surface on which you place your Klangei *next*. Experiment with the many ways to hear and feel music in a unique way with Klangei *next*.

INSTRUCTIONS

Touch interface:

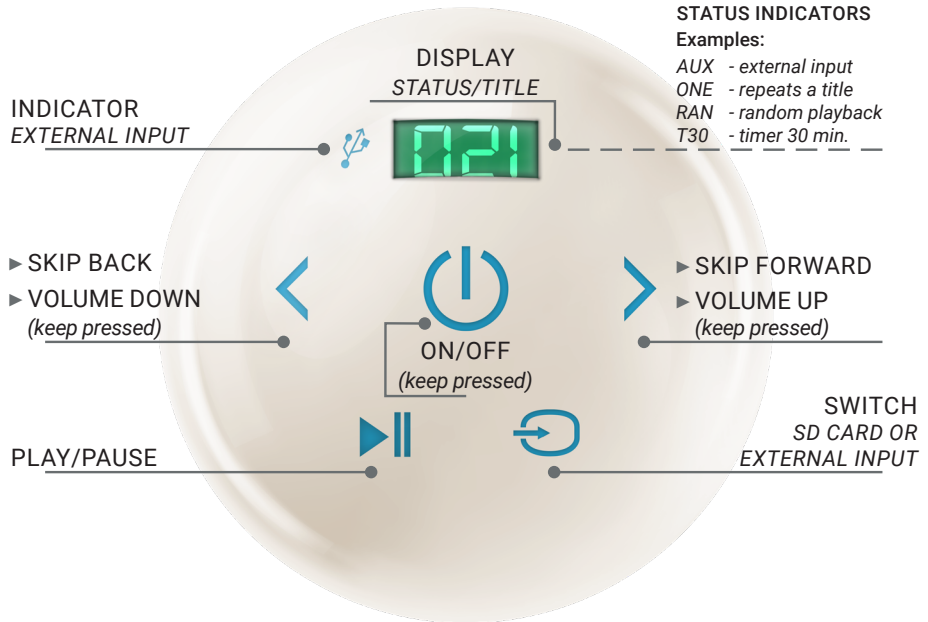

Ports:

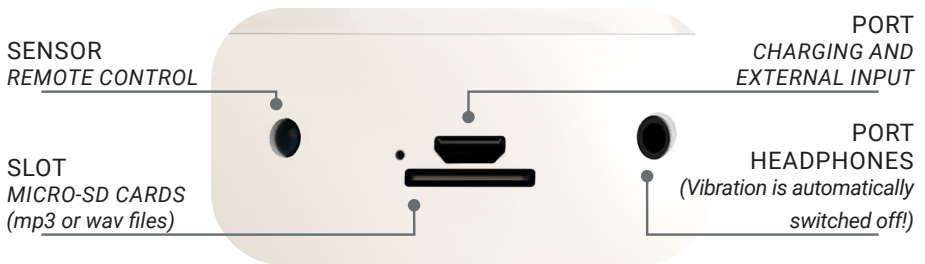

INSTRUCTIONS

Remote control:

TURN OFF



MUTE



TOUCH LOCK



SD-KARTE ABSPIELEN

EXTERNAL INPUT



TIMER
30 min; 60 min; 90 min; off

RANDOM PLAYBACK



REPEAT TITLE

PLAY/PAUSE

VOL+

VOLUME UP

SKIP BACK



SKIP FORWARD

VOLUME DOWN

VOL-

RANDOM PLAY OFF



REPEAT TITLE OFF

TITLE SELECTION

1

2

3

4

5

6

7

8

9

First Track

0

Last Track

EICHER  MUSIC

APPLICATION TIP

Press the LOC button and pick up your Klangei without worrying about unintentionally adjusting anything.

BEDTIME TIP

Activate the timer and relax. Your Klangei switches off automatically.

EASY *use*